


TYPE CH & HH  
HANGER  
INSTALLATION  
INSTRUCTIONS

FILE 96

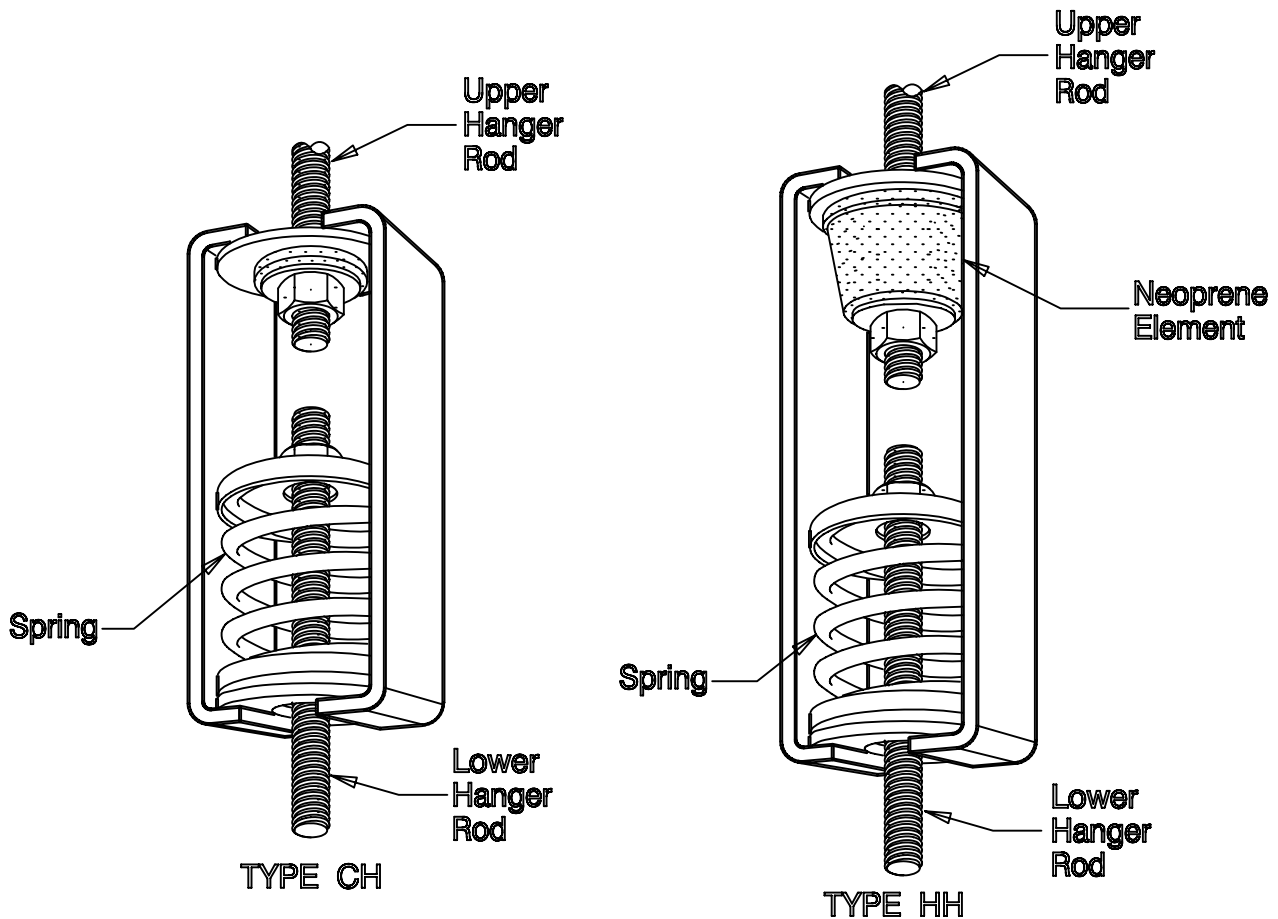

1. Mount hanger box directly against structural element. Do not support hanger from slab diaphragms. When using hanger type HH hanger housing must not be bolted directly to ceiling. Maintain a minimum clearance of one half inch top hanger box & ceiling.
2. Attach lower hanger rod to spring end and equipment.
3. Turn nut on lower hanger rod until load is transferred to spring.
4. Adjust lower nut to level equipment.

NOTE : Upper and lower hanger rods, nuts and washers by others.