



CALIFORNIA DYNAMICS CORP.
5572 ALHAMBRA AVE.
LOS ANGELES, CA. 90032-3106

CALL US - TO SET THINGS RIGHT

PH (323) 223 - 3882

FAX (323) 223 - 7941

email: caldyn@earthlink.net


INSTALLATION INSTRUCTIONS

TYPE JQ

TYPE OS

Attaching Style R
Spring Vibration Isolator

FILE 78R

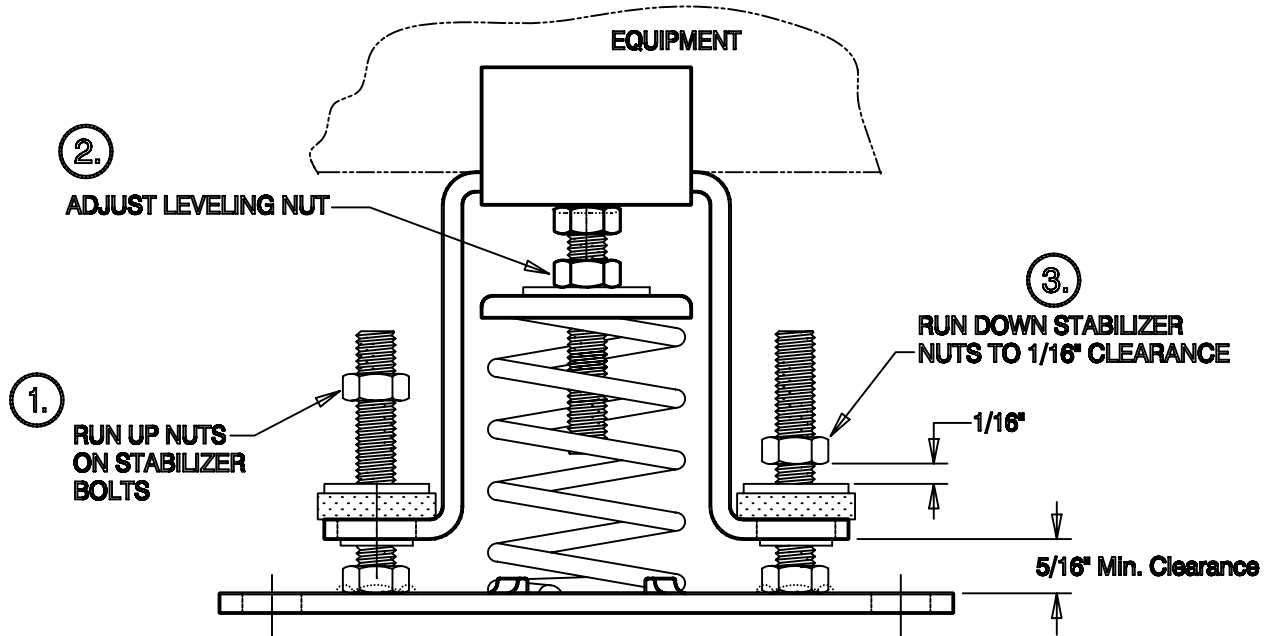

THESE HIGH QUALITY ISOLATORS ARE EQUIPPED WITH STABILIZER BOLTS AND LEVELING NUT WHICH MUST BE PROPERLY ADJUSTED TO PROVIDE FULL ISOLATION. THEY MAY BE BOLTED TO ANY MOUNTING SURFACE THAT IS WITHIN 1/4" OF BEING FLAT & LEVEL. AFTER POSITIONING THE EQUIPMENT SQUARELY ON THE ISOLATORS, USE THE FOLLOWING ADJUSTMENT PROCEDURE:

1. Run up the two stabilizer nuts to the top of the stabilizer bolts.
2. Adjust the leveling nut on each isolator to level the equipment and distribute the load as evenly as possible, allowing 5/16" minimum clearance above the base plate.
3. Run down the stabilizer nuts until there is 1/16" clearance above the washer on each stabilizer bolt. **NOTE** : Stabilizer nuts alone must not be used to level equipment.

CAUTION: BEFORE DRILLING ANY MOUNTING HOLES OR INSERTING ANY MOUNTING SCREWS INTO EQUIPMENT, CHECK TO BE SURE THERE WILL BE NO INTERFERENCE OR DAMAGE.